

4=1/4 X 1/2 U-BOLTS  
8=1/4 LOCK NUTS  
8=1/4 USS WASHERS




IF THE WARN RT25 IS USED MUST USE THE METRIC BOLTS THAT ARE SUPPLIED WITH THE HARDWARE IN THE BAG WITH THE WINCH. THESE BOLTS ARE USED TO MOUNT THE WINCH TO THE PLATE.


# 298112-R92

YAMAHA BRUIN 250 2X4 2005

USE TWO OF THE 1/4 X 1/2 U-BOLTS TWO 1/4 LOCK NUTS AND FOUR USS WASHERS TO MOUNT THE FRONT OF THE PLATE.

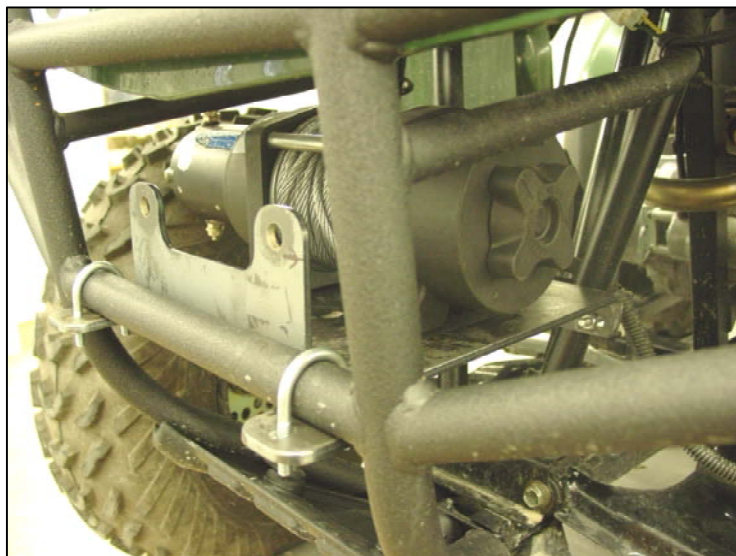

USE TWO OF THE 1/4 X 1/2 U-BOLTS TWO 1/4 LOCK NUTS AND FOUR USS WASHERS TO MOUNT THE REAR OF THE PLATE.

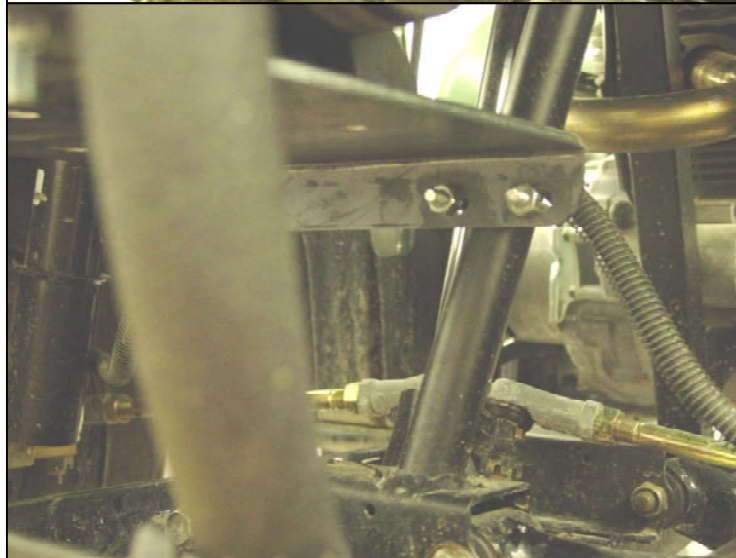

THE WINCH WILL HAVE HARDWARE TO MOUNT THE WINCH TO THE PLATE AND TO MOUNT THE ROLLER FAIR LEAD TO THE PLATE.

