

- 4=5/16 X 1 1/4 BOLTS
- 14=5/16 LOCK NUTS
- 18=5/16 USS WASHERS
- 6=5/16 X 3/4 U-BOLTS
- 2=3/8 X 1 1/2 BOLTS
- 2=3/8 SAE WASHERS
- 2=8MMX1.25X30MM BOLTS

TWO OF THESE BOLTS AND TWO OF THESE WASHERS ARE USED IN THE FRONT HOLES TO MOUNT THE WINCH TO THE PLATE.

THESE BOLTS AND WASHERS ARE USED ONLY IF THE 5000LB RAMSEY WINCH IS USED. THEY ARE USED TO MOUNT IN THE FRONT HOLES OF THE PLATES.




298121-R101

KAWASAKI MULE'S 600 / 610
2000-5000LB WINCHES

IF THE HAWSE FAIRLEAD FROM WARN IS USED IN PLACE OF THE ROLLER FAIRLEAD. YOU MAY NEED TO PURCHASE LONGER BOLTS TO MOUNT THE FAIRLEAD TO THE PLATE.

RAMSEY'S WINCH IS SUPPLIED WITH A ROLLER FAIRLEAD. THE WARN WILL COME WITH A HAWSE FAIRLEAD. THIS DEPENDS ON THE WINCH THAT IS PURCHASED. BOTH THE ROLLER OR HAUS FAIRLEAD WILL MOUNT IN THE SAME SPECIFIC POSITION.

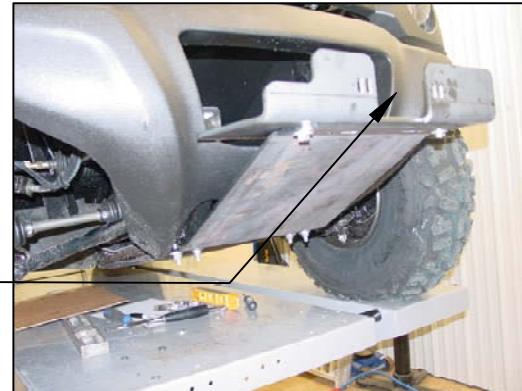

MOUNT THE REAR OF THE PLATE TO THE FRAME USE 4=5/16 X 3/4 U-BOLT, 8=5/16 USS WASHERS AND 8=5/16 LOCK NUTS.



MOUNT THE TWO PLATES TOGETHER BY USING 2=5/16 X 1 1/4 BOLTS 4=5/16 USS WASHERS AND 2=5/16 LOCK NUTS.

THE WINCHES WILL MOUNT INTO THESE FRONT HOLES IN THE PLATE USE 2=5/16 X 1 1/4 BOLTS 2=5/16 USS WASHERS. DEPENDING ON WHAT WINCH YOU PURCHASE. IF THE WARN RT25 IS USED USE THE TWO 30MM METRIC BOLTS HERE.



MOUNT THE BOTTOM SUPPORT BRACKET TO THE BOTTOM OF THE FRAME WITH 2=5/16 X 3/4 U-BOLTS ,4=5/16 USS WASHERS AND 4=5/16 LOCK NUTS.

