

- 2=5/16 X 3/4 U-BOLTS-A
- 4=3/16 X 1 X 1 ROUND CLIPS-B
- 8=5/16 LOCK NUTS-C
- 12=5/16 USS WASHERS-D
- 4=5/16 X 2 1/4 BOLTS-E




298125-R105

2006 YAMAHA WOLVERINE 450 4X4

IF THE WARN RT25 IS USED MUST USE THE METRIC BOLTS THAT ARE SUPPLIED WITH THE HARDWARE IN THE BAG WITH THE WINCH. THESE BOLTS ARE USED TO MOUNT THE WINCH TO THE PLATE.

THIS PLATE IS DESIGNED TO FIT THE RAMSEY 2500LB, AND ALSO THE WARN 2000LB , 2500LB WINCHES.

RAMSEY'S WINCH IS SUPPLIED WITH A ROLLER FAIRLEAD. THE WARN WILL COME WITH A HAWSE FAIRLEAD. THIS DEPENDS ON THE WINCH THAT IS PURCHASED. BOTH THE ROLLER OR HAUS FAIRLEAD WILL MOUNT IN THAT SPECIFIC POSITION.

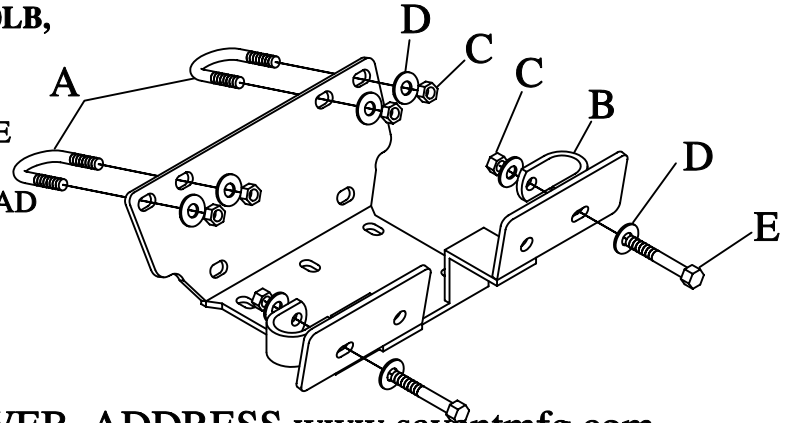

IF THE HAWSE FAIRLEAD FROM WARN IS USED IN PLACE OF THE ROLLER FAIRLEAD USE THE BOLTS AND NUTS THAT OR ON THE HAWS.

SAVANT'S MFG PH. # 1-800-326-6880

WEB. ADDRESS www.savantmfg.com

THE INSTALLATION WILL BE EASIER IF YOU DROP THE FRONT OF THE BOTTOM SKID. REPLACE THE FRONT SKID BOLTS ONCE THE INSTALLATION IS COMPLETE.

(TO INSTALL) PLACE THE PLATE INTO THE CAVITY OF THE BUMPER AND RUN THE BOLTS THROUGH THE PLATE INTO THE CLIPS. THREAD THE NUT ON THE BOLTS WITH THE WASHERS. **DO NOT TIGHTEN THEM.** THEN INSERT THE WINCH ON TOP OF THE PLATE FROM THE FRONT OF THE BUMPER AND PROCEED TO INSTALL THE REST OF THE HARDWARE.

