

- 2=1/4 X 1 YELLOW LONG U-BOLTS
- 2=1/4 X 3/8 U-BOLTS
- 2=1/4 X 1/2 U-BOLTS
- 12=1/4 USS WASHERS
- 12=1/4 LOCK NUTS

IF THE WARN RT25 IS USED MUST USE THE METRIC BOLTS THAT ARE SUPPLIED WITH THE HARDWARE IN THE BAG WITH THE WINCH. THESE BOLTS ARE USED TO MOUNT THE WINCH TO THE PLATE.




298126-R106

06 - KAWASAKI BRUTE FORCE 650 4X4
2000-3000 RAMSEY/WARN WINCHES

1ST STEP REMOVE THE PLASTIC BUMPER GUARD. THIS WILL BE REPLACED ONCE THE PLATE HAS BEEN INSTALLED.




2ND STEP IS TO PLACE THE MAIN PLATE INTO THE CAVITY. DO NOT BOLT IT TO THE BUMPER YET. SLID THE WINCH IN FROM THE TOP BETWEEN THE BUMPER TUBES.

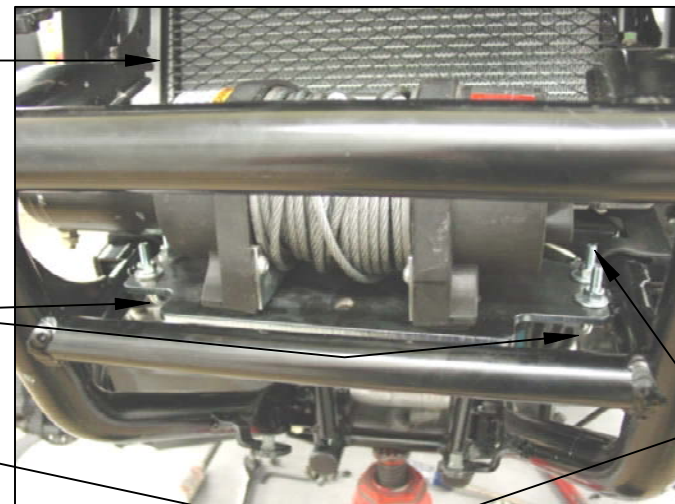

2=1/4 X 3/8 U-BOLTS

WHEN INSTALLING THE RT25 WARN YOU MAY NEED TO TRIM THE EXCESS THREADS ON THIS ONE LEG OF THE U-BOLT. THIS IS FOR THE SWITCH TO CLEAR.

LAST STEP IS TO MOUNT THE FRONT ROLLER PLATE TO THE BUMPER WITH THE CORRECT U-BOLTS. THEN BOLT THE WINCH TO THE PLATES.

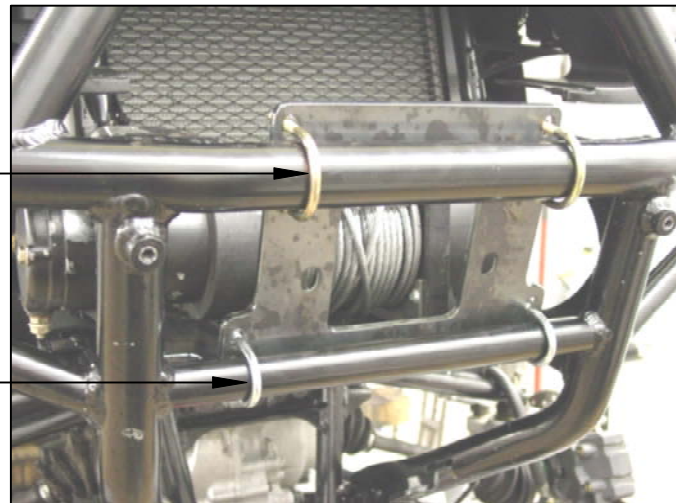

2=1/4 X 1 YELLOW U-BOLTS

2=1/4 X 1/2 U-BOLTS