


- 2=5/16 X 3/4 U-BOLTS
- 2=1/4 X 1/2 U-BOLTS
- 4=5/16 LOCK NUTS
- 4=1/4 LOCK NUTS
- 8=5/16 USS WASHERS
- 2=5/16 X 1 1/4 BOLTS
- 4=1/4 USS WASHERS
- 2=8MMX1.25X30MM BOLTS

IF THE HAWSE FAIRLEAD FROM WARN IS USED IN PLACE OF THE ROLLER FAIRLEAD USE THE BOLTS AND NUTS THAT OR ON THE HAWS.




- 2=1/4 X 1/2 U-BOLTS
- 4=1/4 LOCK NUTS
- 4=1/4 USS WASHERS

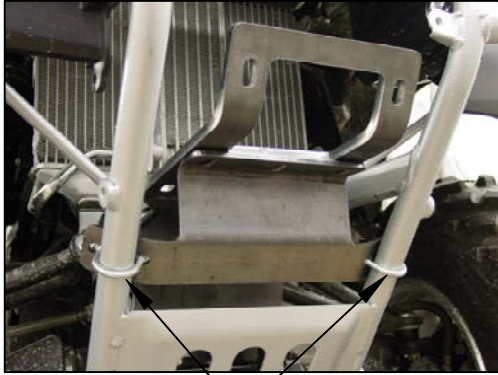

#298127-R107

HONDA FOREMAN 500 RUBICON 500 2007.

RAMSEY'S WINCH IS SUPPLIED WITH A ROLLER FAIRLEAD. THE WARN WILL COME WITH A HAWSE FAIRLEAD. THIS DEPENDS ON THE WINCH THAT IS PURCHASED. BOTH THE ROLLER OR HAWSE FAIRLEAD WILL MOUNT IN THAT SPECIFIC POSITION.

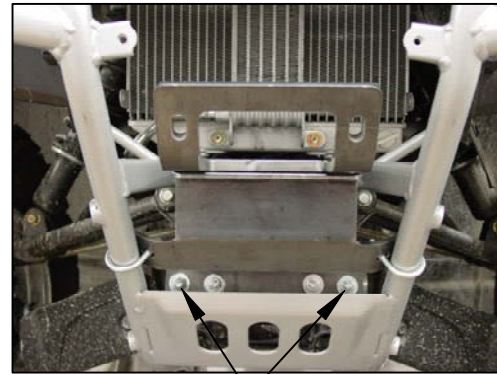

- 2=5/16 X 3/4 U-BOLTS
- 4=5/16 LOCK NUTS
- 4=5/16 USS WASHERS



- 2=5/16 X 1 1/4 BOLTS(USED IN THE FRONT TWO HOLES)
- 2=8MMX1.25MMX30MM BOLTS (USED ONLY IF WARN RT25 IS USED)
- 2=5/16 X 1 BOLTS(SUPPLIED WITH THE WINCH)
- 2=8MMX1.25X20MM BOLTS FOR REAR(SUPPLIED IN WINCH HARDWARE ONLY USED FOR WARN RT25)
- 4=5/16 USS WASHERS



REMOVE THE FRONT SKID PAN FOR EASIER ACCESS TO INSTALL THE PLATES. REPLACE THIS WHEN FINISHED MOUNTING PLATES.

REMOVE THE FRONT BLACK GRILL FOR EASIER ACCESS TO INSTALL THE PLATES. REPLACE THIS WHEN FINISHED MOUNTING PLATES.



SAVANT'S MFG PH. # 1-800-326-6880

WEB. ADDRESS www.savantmfg.com