

2=1/4X1 YELLOW U-BOLTS

2=1/4 X 1/2 U-BOLTS

2=1/4 X 3/8 U-BOLTS

4=5/16 X 1 BOLTS

6=5/16 USS WASHERS

12=1/4 LOCK NUTS


12=1/4 USS WASHERS

2=5/16 LOCK NUTS

IF THE WARN RT25 IS USED MUST USE THE METRIC BOLTS THAT ARE SUPPLIED WITH THE HARDWARE IN THE BAG WITH THE WINCH. THESE BOLTS ARE USED TO MOUNT THE WINCH TO THE PLATE.



REMOVE THE PLASTIC FRONT BUMPER GUARD. REPLACE THIS ONCE YOU HAVE MOUNTED THE PLATES.

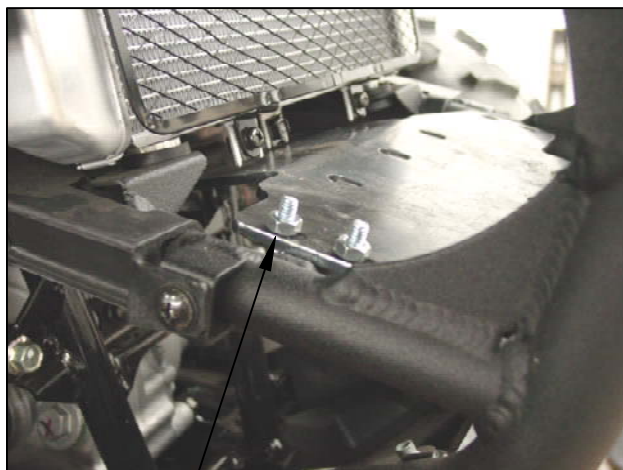

USE THE 1/4 X 3/8 U-BOLTS 1/4 LOCK NUTS AND 1/4 USS WASHERS TO MOUNT THE SIDES OF THE PLATE.




# # 298128-R108

2007 KAWASAKI BRUTE FORCE 750 4X4

THIS PLATE IS DESIGNED TO FIT THE RAMSEY 2500LB, AND ALSO THE WARN 2000LB , 2500LB WINCHES.

RAMSEY'S WINCH IS SUPPLIED WITH A ROLLER FAIRLEAD. THE WARN WILL COME WITH A HAWSE FAIRLEAD. THIS DEPENDS ON THE WINCH THAT IS PURCHASED. BOTH THE ROLLER OR HAUS FAIRLEAD WILL MOUNT IN THAT SPECIFIC POSITION.

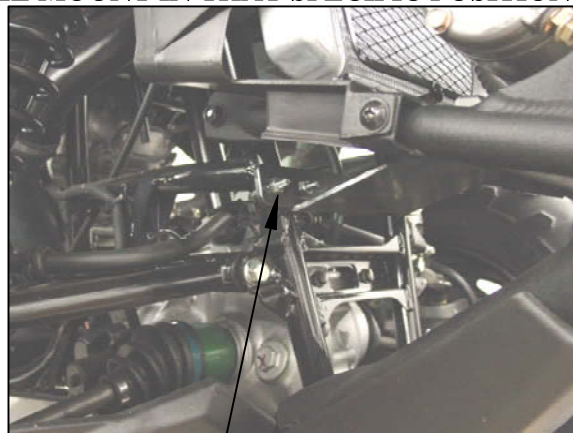

USE THE 1/4 X 1/2 U-BOLTS 1/4 LOCK NUTS AND 1/4 USS WASHERS TO MOUNT THE REAR OF THE PLATE.



USE THE 1/4 X 1 YELLOW U-BOLTS 1/4 LOCK NUTS AND 1/4 USS WASHERS TO MOUNT THE TOP OF THE PLATE. THE BOTTOM WILL USE THE TWO OF THE 5/16 X 1 BOLTS THESE WILL BOLT INTO THE WINCH THAT IS PURCHASED. MOUNT THE ROLLER FAIRLEAD WITH THE OTHER TWO 5/16 X 1 BOLTS NUTS AND WASHERS. THE WINCH HARDWARE WILL HAVE EXTRA 5/16 X 1 BOLTS FOR THE REAR OF THE WINCH TO MOUNT TO THE PLATE.

WHEN MOUNTING THE ROLLER FAIRLEAD FACE THE BOLTS FORWARD SO THE TREADS DO NOT TOUCH THE WINCH ONCE IT HAS BEEN MOUNTED.

SAVANT'S MFG PH. # 1-800-326-6880

WEB. ADDRESS [www.savantmfg.com](http://www.savantmfg.com)