


2=12MMX1.25X25MM
BOLTS(97780A714)
2=5/16 USS
2=8MMX1.25X20MM BOLTS



MUST MOUNT THE WINCH TO THE PLATE BEFORE INSTALLING THE PLATE TO THE MACHINE.


#298137-R118

KUBOTA RTV 1100

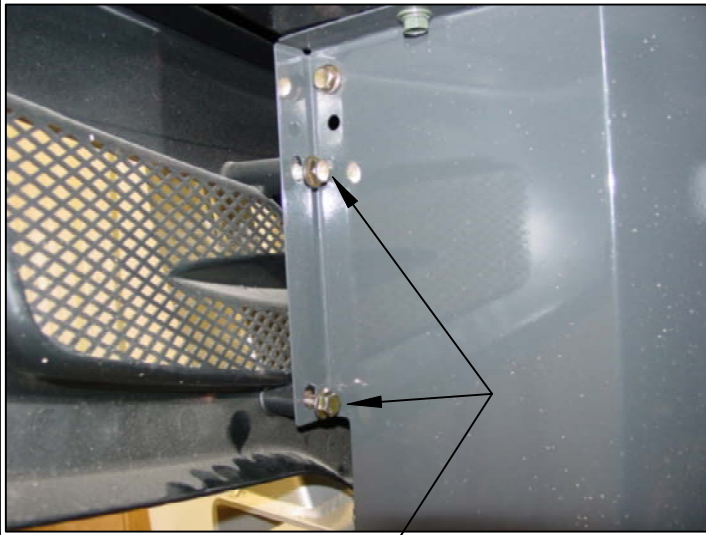

1ST STEP: THEIR WILL BE FOUR BOLTS THAT WILL BE REMOVED FROM THE FRONT PLASTIC BUMPER. THESE WILL BE REPLACED AFTER THE PLATE HAS BEEN MOUNTED. THEY ARE LOCATED UNDER THE FRONT WHEEL WELL.

2ND STEP: REMOVE THE TWO BOLTS THAT ARE LOCATED IN FRONT OF THE RADIATOR ON THE FRAME TUBES. THIS STEP IS EASIER IF YOU PULL THE BOTTOM PART OF THE PLASTIC BUMPER WITH ON HAND TO GAIN ACCESS TO THE BOLTS.

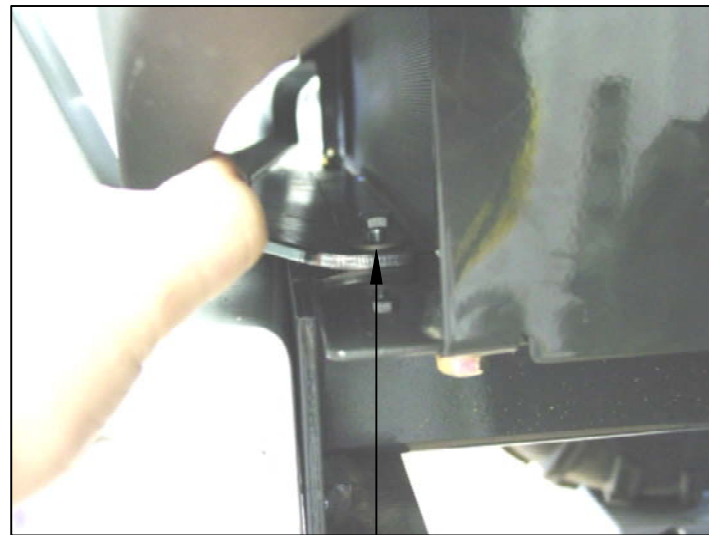

3RD STEP: PLACE THE PLATE IN PLACE AND USE THE 8MMX25MM BOLTS WITH THE 5/16 USS WASHERS TO MOUNT THE REAR OF THE PLATE. LEAVE THE BOLTS LOOSE UNTIL ALL BOLTS HAVE BEEN INSTALLED.

LAST STEP: MOUNT THE FRONT OF THE PLATE TO THE MACHINE WITH THE TWO 12MMX25MM BOLTS. AFTER INSTALLING THE BOLTS TIGHTEN ALL BOLTS THAT WERE LEFT LOOSE.

