

- 2=5/16 X 1 1/2" BOLTS-A
- 4=5/16 LOCK NUTS-B
- 8=5/16 SAE WASHERS-C
- 2=5/16 X 1 BOLTS-D
- 2=1 1/2" PLASTIC WHITE WASHERS-E



# #298138-R119

## KAWASAKI TYREX 750 UTV

**1ST STEP REMOVE THE FRONT PLASTIC BUMPER. THEN REMOVE METAL TUBE BUMPER AFTER INSTALLATION REINSTALL THE BUMPERS.**


**2ND STEP USE THE TWO 5/16 X 1 1/2 BOLTS AND TWO 5/16 WASHERS. RUN THE BOLTS THROUGH THE HOLES THAT ARE NEEDED FOR YOUR WINCH.**

**3RD STEP MOUNT THE WINCH TO THE PLATE LEAVE THE BOLTS LOOSE UNTIL THE WINCH IS ON THE FRAME AND ALL BOLTS HAVE BEEN INSTALLED... WINCH HAS IT'S OWN HARDWARE..**


**4TH STEP PLACE THE 1 1/2 WHITE WASHERS UNDER THE PLATE ONTO THE 1 1/2" BOLTS THAT WERE INSTALLED ON STEP 1.**

PLACE THE 1 1/2" WHITE PLASTIC WASHERS UNDER THESE HOLES IF A 4000LB WINCH IS USED.

PLACE THE 1 1/2" WHITE PLASTIC WASHERS UNDER THESE HOLES IF A 2000-3000LB WINCH IS USED.

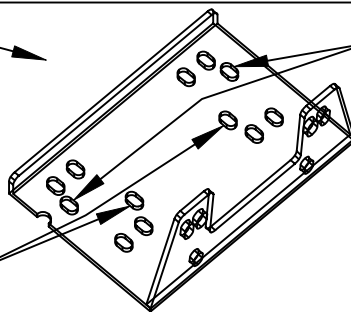


THE WASHERS ARE USED AS SPACERS UNDER THE PLATE..

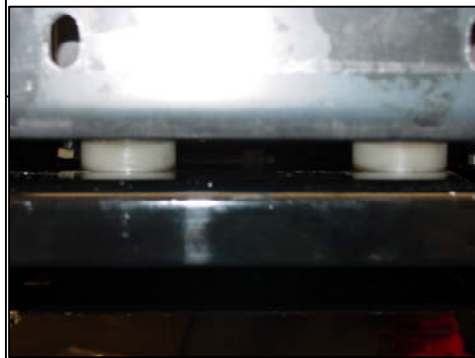

USE THIS SET OF 4 HOLES FOR A 4000LB WINCH.

USE THESE SET OF FOUR HOLES IF A 2000-3000LB WINCH IS USED.

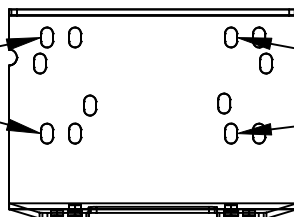

THE FRONT OF THE PLATE WILL BOLT TO THE FRONT TUB. BUMPER AFTER THE TUBE BUMPER HAS BEEN REPLACED ON THE MACHINE.

MOUNT THE ROLLER FAIR LEAD HERE.

