

STRONG SM MADE™

BY SAVANT MANUFACTURING, INC.

www.savantmfg.com

298143-R124

HONDA BIG RED WINCH PLATE 2000-4000LB WINCHES

REMOVE THE FRONT BUMPER FOR
INSTALLATION OF THE PLATES. THE
PLATES WILL BE AT AN ANGLE FOR THE
ROLLER FAIR LEAD PLATE TO PROTRUDE
PASS THE BUMPER TO MOUNT THE
ROLLER FAIR LEAD ONTO THE 3/8"
PLATE.

(G) (H) OR (I)

2=1/4 X 1 YELLOW U-BOLTS-A

4=1/4 USS WASHERS-B

4=1/4 LOCK NUTS-C

4=5/16 X 1 BOLTS-D

6=5/16 LOCK NUTS-E

16=5/16 USS WASHERS-F

2=8MM X 30MM BOLTS-G



2=8MM X 25MM BOLTS-H

6=5/16 X 1 1/4 BOLTS-I

USED ON THE
NEW WARN
WINCHES WITH
METRIC THREADS.

USED ON THE
OLDER WARN AND
RAMSEY WINCHES
WITH STANDARD
THREADS. ALSO
USED TO HOLD THE
ROLLER FAIR LEAD
ON THE 3/8"
BRACKET.

LEAVE ALL HARDWARE LOOSE
UNTIL ALL WASHERS AND NUTS
HAVE BEEN INSTALLED ONTO
THREADS. ANGLE THE PLATE SO
THE ROLLER PLATE WILL CLEAR
THE BUMPER AND TIGHTEN ALL
HARDWARE

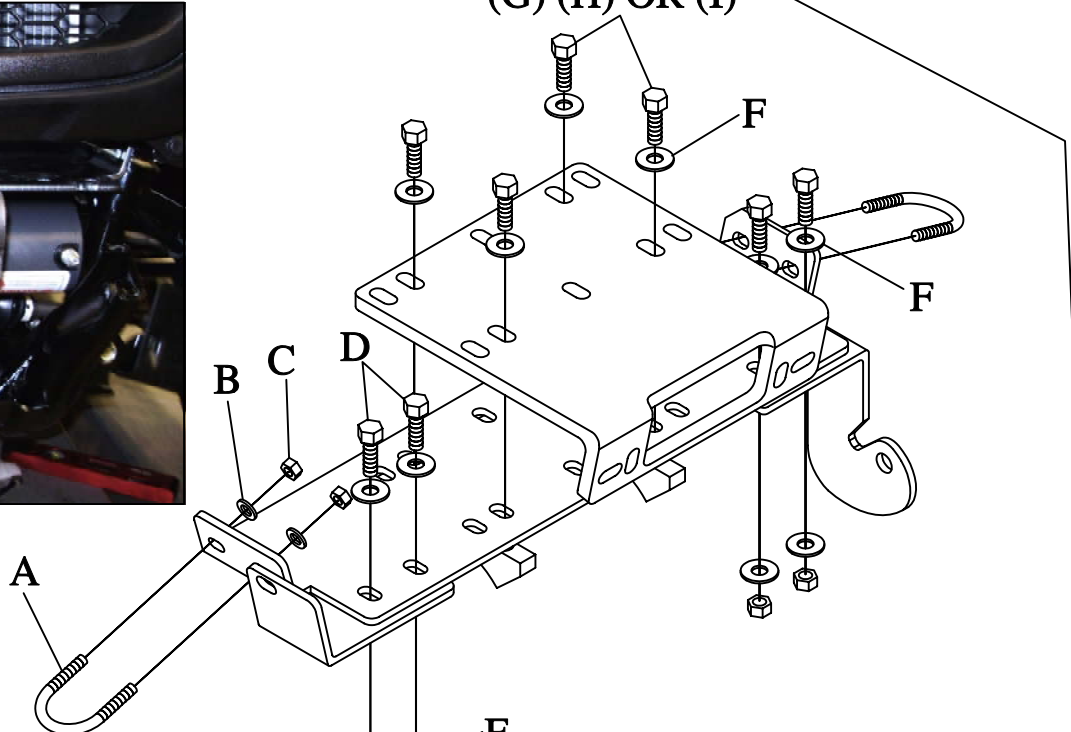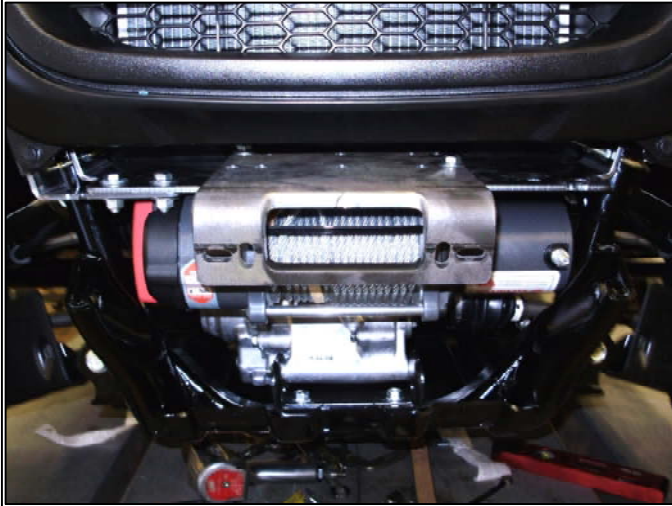

USE (I) (E) AND
(F) TO MOUNT
ROLLER TO
PLATE.