


- 8=5/16 X 1 1/4" BOLTS-A
- 2=6MM X 1 X 25MM BOLTS-B
- 2=1/4 USS WASHERS-C
- 16=5/16 USS WASHERS-D
- 8=5/16 LOCK NUTS-E




298144-R125

KAWASAKI TERYX 750 2000-5000LB WINCH MOUNT.

DO NOT REMOVE THE STOCK BUMPER COVER. IT WAS REMOVED ONLY FOR PICTURES FOR THE INSTRUCTIONS. MAY NEED LONGER BOLTS TO MOUNT THE WINCH TO THE PLATE. THE SUPPLIED BOLTS WITH THE WINCH MAY NOT BE LONG ENOUGH.

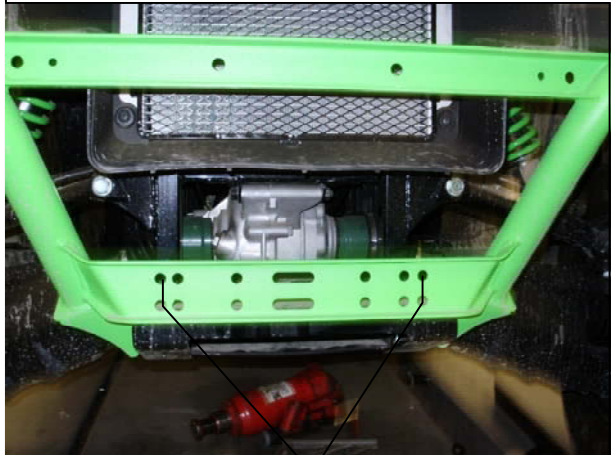

USE FOUR OF THE 5/16 X 1 1/4 BOLTS 5/16 WASHERS AND 5/16 LOCK NUTS TO MOUNT THE PLATE TO THE BUMPER. MOUNT THE LIP OF THE PLATE ON THE BACKSIDE OF THE BUMPER BRACE.

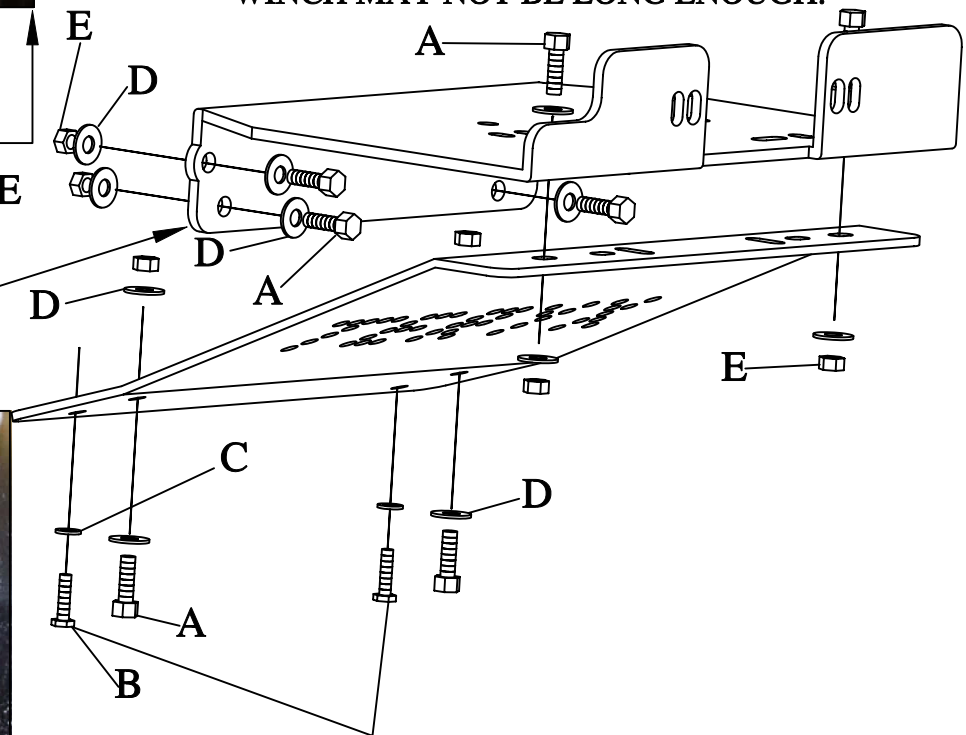

DRILL 3/8" HOLES HERE TO FINISH THE MOUNTING OF THE BRACKET.

TO INSTALL THESE TWO BOLTS MUST REMOVE THE STOCK SCREWS THAT HOLE THE BOTTOM PART OF THE PLASTIC BUMPER GUARD.

TO MOUNT THE SUPPORT BRACKET UNDER THE MAIN PLATE. USE THE TWO 6MM BOLTS, 1/4 USS WASHERS, TWO 5/16 BOLTS FOUR 5/16 WASHERS AND 5/16 LOCK NUTS. MUST DRILL TWO 3/8" HOLES FOR THE TOP HOLES IN THE SUPPORT BRACKET.

FINISHED PICTURE...

