

- 2=5/16X2 BOLTS-A
- 3=5/16X1 BOLTS-B
- 26=5/16 SAE WASHERS-C
- 15=5/16 LOCK NUTS-D
- 4=5/16 X 3/4 U-BOLTS-E
- 2=5/16 X 2 1/4 BOLTS-F
- 2=3/16 X 1 X 1 CLIPS-G
- 2=1/8 X 1 X 7/8 CLIPS-H




# # R70

HONDA 300 2X4 4X4  
93-99 MODELS

MOUNT THE PLATE TO THE BARS THAT RUN PARALLEL WITH THE FRAME. LOCATED UNDER THE FRONT FENDERS.

IF A WARN WINCH IS USED IT WILL HAVE IT'S OWN PLATE. IF A RAMSEY WINCH IS USED USE THE PLATE SUPPLIED IN THE HARDWARE.

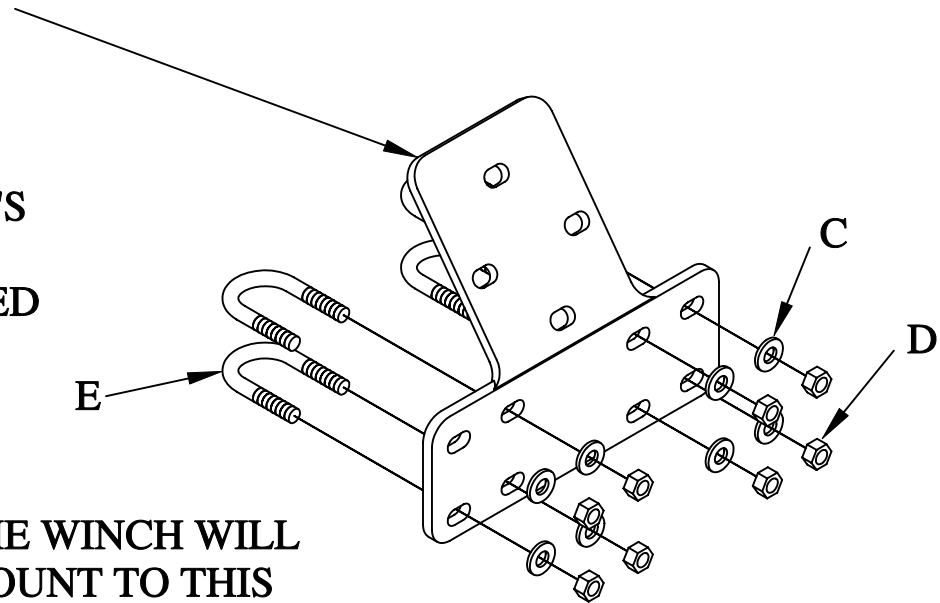

THE WINCH WILL MOUNT TO THIS PLATE, IT WILL HAVE IT'S OWN HARDWARE.



MOUNT THE BRACKET TO THE BARS IN THE FRONT OF THE ATV LIKE THE PICTURE SHOWS.

MOUNT THE ROLLER FAIR LEAD TO THESE HOLES, IT HAS IT OWN HARDWARE.

